

FrontRow Lyrik – Quick Guide



Lyrik: Hear instruction anywhere

This guide has been designed to support the use of your Lyrik systems. It will provide you a quick overview of components and how to use them.

Charge Microphones and Speaker:

Before getting started, fully charge microphones and speaker.
(NOTE: This can take up to 8 hours):

Microphones

1. Connect power supply to charger
2. Place microphones into charger
Steady green light indicates a full charge




Speaker

1. Connect power supply to speaker
Steady green "FULL" light indicates a full charge



Using Your Lyrik:

- Turn Tower on
The on switch is located at the back of the speaker.
- Place Teacher Mic around neck. Distance from mouth to top of microphone should be around 15 – 20cm.

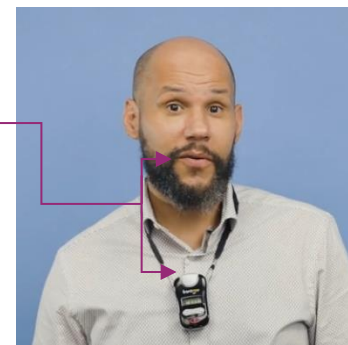

Teacher Microphone



Student Microphone

